



**ORTRONICS**


125 EUGENE O'NEILL DRIVE  
NEW LONDON, CT 06320  
TEL: 860-445-3800  
FAX: 860-405-2990

TITLE

MM6 CABLE RUNWAY MOUNTING  
BRACKET INSTRUCTIONS

**INSTRUCTIONS:**

1. REMOVE THE TOP UPRIGHT BOLTS ON BOTH FRONT AND REAR OF RACK.
2. LOOSEN THE BOTTOM BOLTS ENOUGH TO ACCEPT THE BRACKETS WIDTH, THE SPEED NUT CAN STAY ON THE BOTTOM BOLT.
3. SLIDE THE BRACKET INSIDE THE CHANNEL AND REPLACE THE TOP BOLTS
4. TIGHTEN BOTH TOP AND BOTTOM BOLTS.

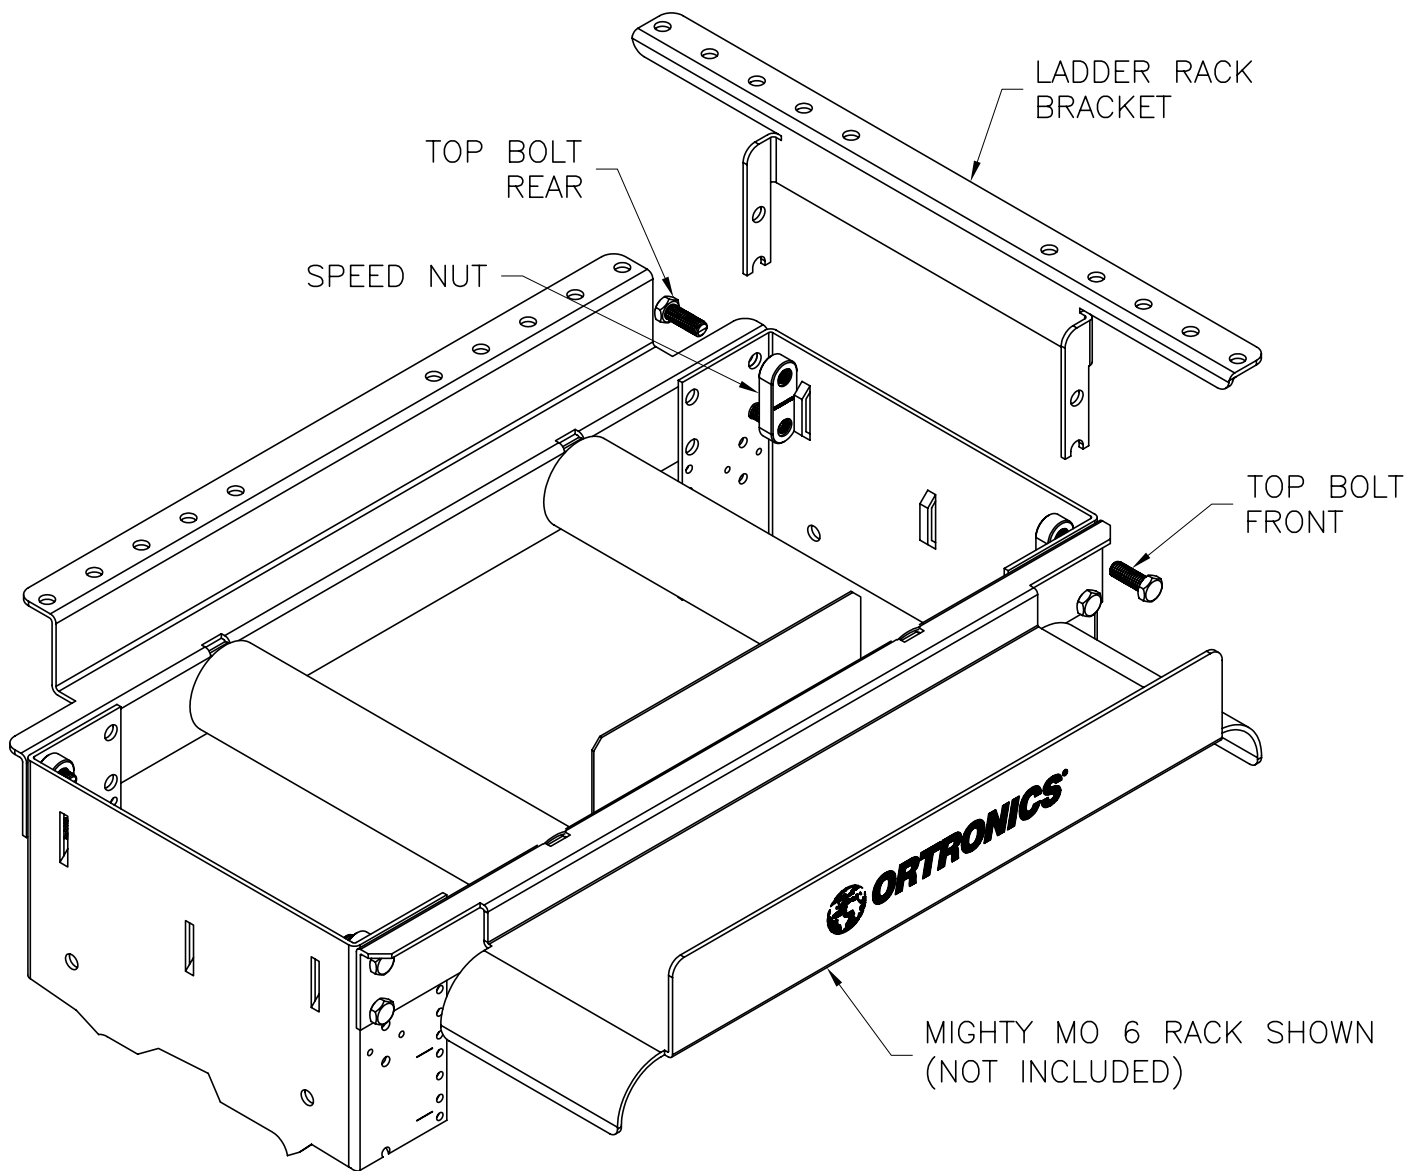

CAD: 716014101

INSTRUCTION SHEET #	REV.	ECN #	SHEET	DWN.BY:	DATE	CHK.BY:	DATE	APP.BY:	DATE
OR-71601410	00		1 of 1	LEVESQUE	10/28/03	JIM LUCY	10/30/03	MEM	10/30/03